

# HYUNDAI/KIA 26350-2M000 OIL FILTER

September 2020 | Version 1.10

## INSTALLATION GUIDE

### STEP 1

Confirm that all components needed for oil filter service are present in the box.

### STEP 2

Pull the *cotter pin* (**D**) from the relief tube of the housing cap.

### STEP 3

Twist the *oil filter cap plug* (**B**) 90 degrees to form a line with the notches on the relief tube.

### STEP 4

Pull *oil filter cap plug* (**B**) out of housing cap to purge oil from the housing.

CAUTION: OIL MAY BE HOT

### STEP 5





Remove *housing cap* from filter housing using 24mm socket. Remove and discard used *oil filter element*. (**A**)

### STEP 6

Replace *O-ring seal* (**E**) on housing cap ensuring placement in correct groove and lightly lubricate the O-ring with clean oil.

TIP: REMOVE THE OLD O-RING USING A PRY TOOL OR SMALL FLATHEAD SCREWDRIVER

### Package Contents:

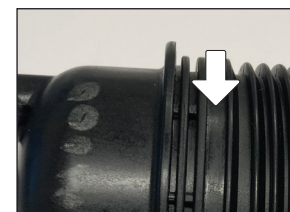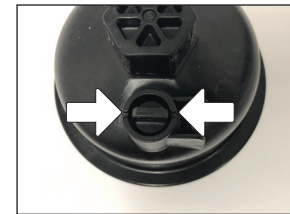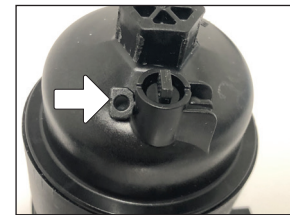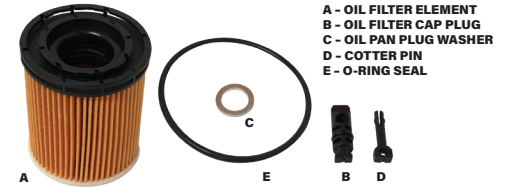


# HYUNDAI/KIA 26350-2M000 OIL FILTER

September 2020 | Version 1.10

## INSTALLATION GUIDE


### STEP 7

Insert *oil filter cap plug (B)* into filter's plastic track with pintle parallel to the track and lock into track by twisting plug 90 degrees.

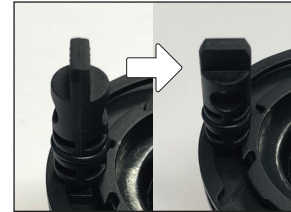


### STEP 8

Insert *oil filter element (A)* into housing cap while inserting oil filter cap plug (B) through drain hole of housing cap.

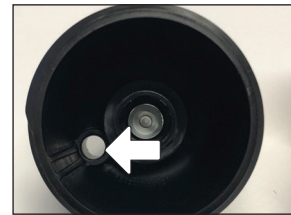

### STEP 9

Install *cotter pin (D)* into side of drain hole and through *oil filter plug (B)*. Reverse of step 2.

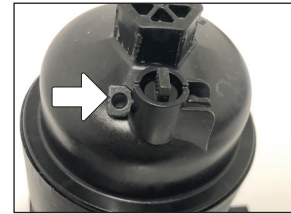

### STEP 10

Thread *housing cap* with filter into housing and tighten to 35Nm using 24mm socket.

### STEP 11

Fill the engine oil reservoir to the manufacturer's recommended oil level with the appropriate lubricating oil.

### STEP 12

Start the engine and observe the oil filter housing cap to ensure that no oil leaks are present.

